


CONDOR/ Istruzioni di montaggio / Fitting instructions

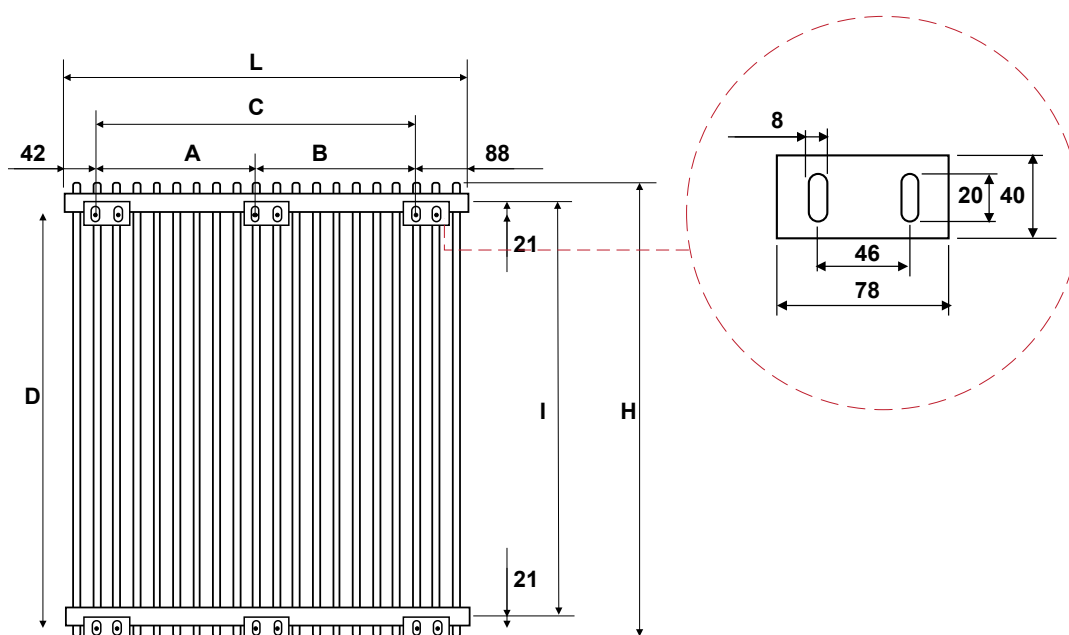

codice	A	B	C	D	H	I	L
CD10...610	X	X	210	560	610	560	340
CD12...610	X	X	280	560	610	560	410
CD14...610	X	X	350	560	610	560	480
CD16...610	X	X	420	560	610	560	550
CD18...610	X	X	490	560	610	560	620
CD20...610	X	X	560	560	610	560	690
CD10...810	X	X	210	760	810	760	340
CD12...810	X	X	280	760	810	760	410
CD14...810	X	X	350	760	810	760	480
CD16...810	210	210	X	760	810	760	550
CD18...810	245	245	X	760	810	760	620
CD12...1010	X	X	280	960	1010	960	410
CD16...1010	X	X	420	960	1010	960	550
CD12...1210	X	X	280	1160	1210	1160	410
CD14...1210	175	175	X	1160	1210	1160	480
CD16...1210	210	210	X	1160	1210	1160	550
CD20...1210	280	280	X	1160	1210	1160	690
CD08...1510	X	X	140	1460	1510	1460	270
CD10...1510	X	X	210	1460	1510	1460	340
CD12...1510	140	140	X	1460	1510	1460	410
CD16...1510	210	210	X	1460	1510	1460	550
CD08...1810	X	X	140	1760	1810	1760	270
CD10...1810	X	X	210	1760	1810	1760	340
CD12...1810	140	140	X	1760	1810	1760	410
CD14...1810	175	175	X	1760	1810	1760	480
CD16...1810	210	210	X	1760	1810	1760	550
CD08...2010	X	X	140	1960	2010	1960	270
CD10...2010	X	X	210	1960	2010	1960	340
CD12...2010	140	140	X	1960	2010	1960	410
CD14...2010	175	175	X	1960	2010	1960	480
CD16...2010	210	210	X	1960	2010	1960	550
CD10...2210	X	X	210	2160	2210	2160	340
CD12...2210	X	X	280	2160	2210	2160	410