


PICCHIO/Istruzioni di montaggio / Fitting instructions

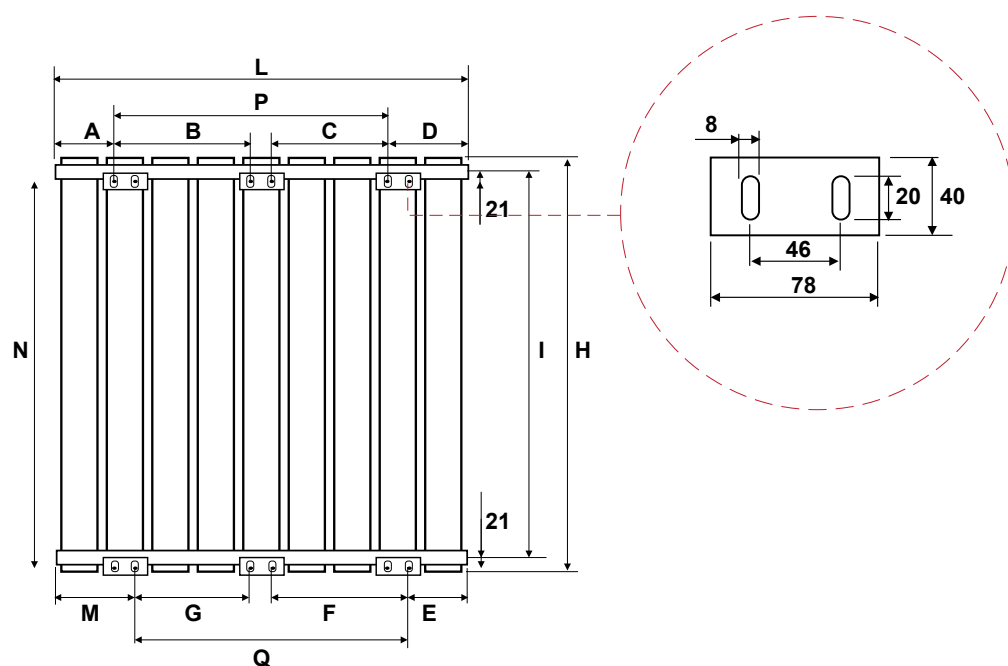

codice	A	B	C	D	E	F	G	H	I	L	M	N	P	Q
PC06...610	92	x	x	138	92	x	x	610	560	455	138	560	225	225
PC08...610	92	x	x	138	92	x	x	610	560	605	138	560	375	375
PC10...610	92	x	x	138	92	x	x	610	560	755	138	560	525	525
PC04...810	92	x	x	x	92	x	x	810	760	305	x	760	x	x
PC06...810	92	x	x	138	92	x	x	810	760	455	138	760	225	225
PC08...810	92	x	x	138	92	x	x	810	760	605	138	760	375	375
PC04...1010	92	x	x	x	92	x	x	1010	960	305	x	960	x	x
PC06...1010	92	x	x	138	92	x	x	1010	960	455	138	960	225	225
PC08...1010	92	x	x	138	92	x	x	1010	960	605	138	960	375	375
PC06...1210	92	x	x	138	92	x	x	1210	1160	455	138	1160	225	225
PC07...1210	92	x	x	138	92	x	x	1210	1160	530	138	1160	300	300
PC08...1210	92	x	x	138	92	x	x	1210	1160	605	138	1160	375	375
PC06...1510	92	x	x	138	92	x	x	1510	1460	455	138	1460	225	225
PC08...1510	92	x	x	138	92	x	x	1510	1460	605	138	1460	375	375
PC10...1510	92	225	254	138	92	225	254	1510	1460	755	138	1460	x	x
PC04...1810	92	x	x	x	92	x	x	1810	1760	305	x	1760	x	x
PC06...1810	92	x	x	138	92	x	x	1810	1760	455	138	1760	225	225
PC07...1810	92	x	x	138	92	x	x	1810	1760	530	138	1760	300	300
PC08...1810	92	x	x	138	92	x	x	1810	1760	605	138	1760	375	375
PC10...1810	92	225	254	138	92	225	254	1810	1760	755	138	1760	x	x
PC04...2010	92	x	x	x	92	x	x	2010	1960	305	x	1960	x	x
PC06...2010	92	x	x	138	92	x	x	2010	1960	455	138	1960	225	225
PC07...2010	92	x	x	138	92	x	x	2010	1960	530	138	1960	300	300
PC08...2010	92	x	x	138	92	x	x	2010	1960	605	138	1960	375	375
PC10...2010	92	225	254	138	92	225	254	2010	1960	755	138	1960	x	x
PC06...2210	92	x	x	138	92	x	x	2210	2160	455	138	2160	225	225
PC07...2210	92	x	x	138	92	x	x	2210	2160	530	138	2160	300	300
PC08...2210	92	x	x	138	92	x	x	2210	2160	605	138	2160	375	375